

# CA-1


## Cosmetic Adapter

### Description

Use the CA-1 when installing a low-profile circular ceiling mounted sensor (such as the DT-355, CI-355, or UT-355 models) in a 4" square Wiremold V5748-2 j-box on a hard ceiling, or in the opening of a mudring for a drop ceiling. The CA-1 provides a finished look by filling in the spaces at the corners and the unused holes.

### Installation on a Hard Ceiling

1. Pull wires through the opening in the mounting site.
2. Maneuver the CA-1 over the sensor's rear housing so that the CA-1 is flush with the sensor flange.
3. Wire to sensor terminals per sensor instructions.
4. For each of the two small recessed mounting holes on the front of the sensor flange, insert a screw (provided with the sensor) through the flange, through the CA-1 mounting hole, and into the square box.
5. Tighten the screws and snap the front cover onto the sensor.

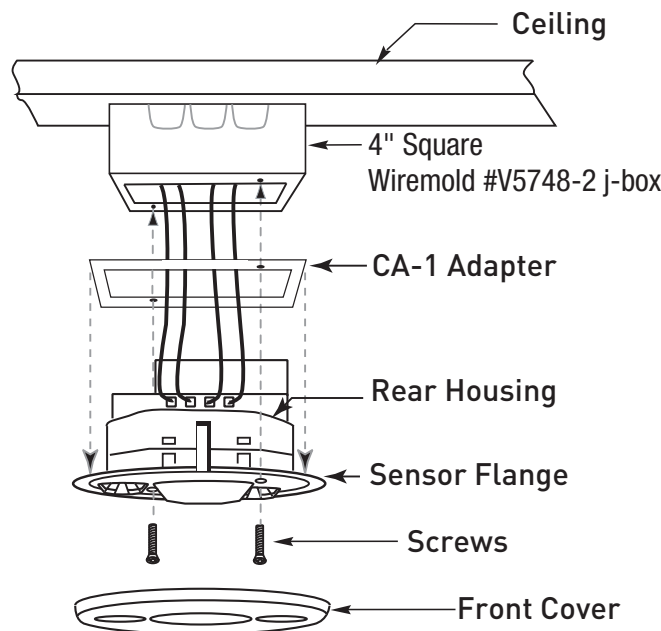

04577r2


[www.wattstopper.com](http://www.wattstopper.com)

Santa Clara, CA 95050 • 800.879.8585

Installation Instructions

## Installation in a Drop Ceiling

1. Pull sensor wires into the j-box.
2. Attach the mudring to the j-box.
3. Pull sensor wires through the opening in the mudring.
4. Maneuver the CA-1 over the sensor's rear housing so that the CA-1 is flush with the sensor flange.
5. Wire to sensor terminals per sensor instructions.
6. For each of the two small recessed mounting holes on the front of the sensor flange, insert a screw (provided with the sensor) through the flange, through the CA-1 mounting hole, and into the holes in the mudring.
7. Tighten the screws and snap the front cover onto the sensor.

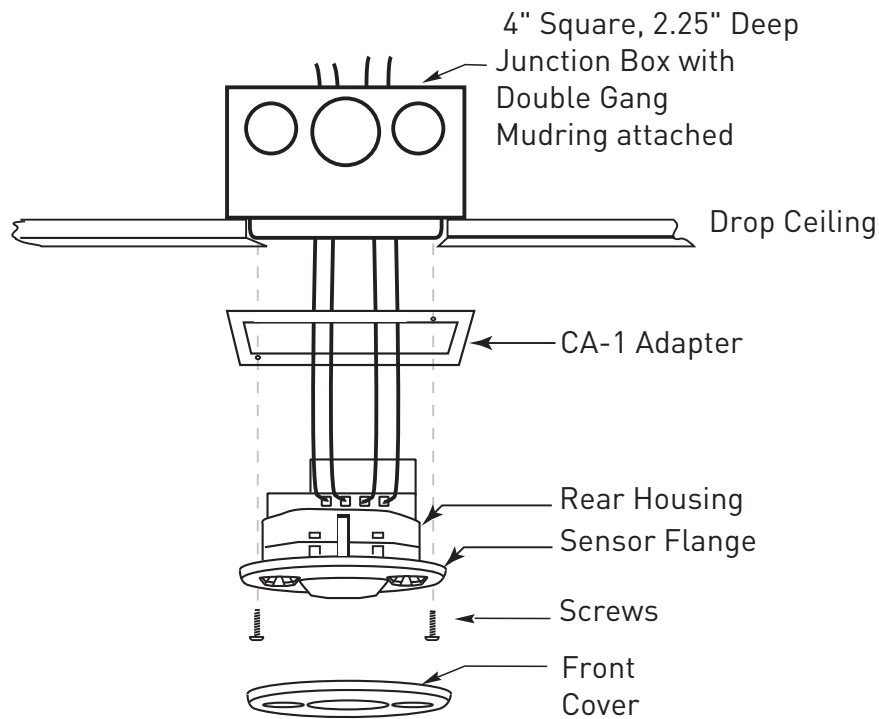

[www.wattstopper.com](http://www.wattstopper.com)  
Santa Clara, CA 95050 • 800.879.8585