




ProFormance™ Electronic Fluorescent Ballast Specifications

EP260IS/120


Ballast Type: Electronic Fluorescent
Starting Method: Instant Start
Lamp Connection: Parallel
Input Voltage: 120V
Input Frequency: 50/60Hz

Lamp Type	# of Lamps	Volts	Rated Lamp Watts	Min. Start Temp (°F/°C)	Input Current (Amps)	Input Power (Watts)	Ballast Factor	THD %	Power Factor	B. E. F.	Wire Diag.
F96T12/ES	2	120	60	60/16	0.90	108	0.95	<10	0.99	0.88	2-4
F72T12	2	120	57	0/-18	0.90	105	0.95	<10	0.98	0.90	2-4
F48T12	2	120	40	0/-18	0.62	74	0.98	<10	0.99	1.32	2-4
F42T12	2	120	35	0/-18	0.55	65	0.98	<10	0.98	1.51	2-4
F96T12/HO	1	120	110	-20/-29	0.90	105	0.95	<10	0.98	0.90	1-12

WIRING DIAGRAMS

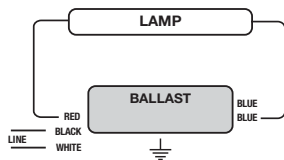

1-12

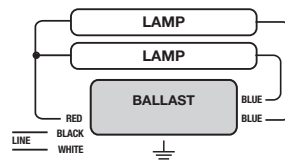


2-4

STANDARD LEAD LENGTHS

	in.	cm.
Black	24	60.96
White	27	60.96
Blue	48	121.92
Red	72	182.88

OCV: 600V

CASE DIAGRAM

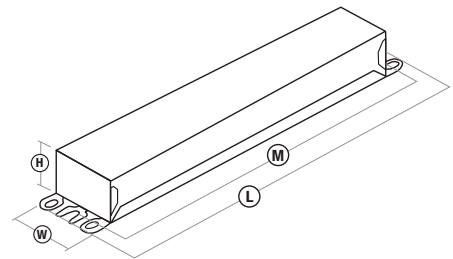

CASE DIMENSIONS

Overall (L)	Width (W)	Height (H)	Mounting (M)
9.49"	1.70"	1.15"	8.82"

Actual performance can vary depending on operating conditions. Specifications are subject to change without notice. All specifications are nominal unless otherwise noted.

PN# 50132

