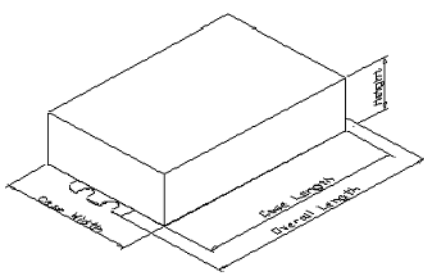
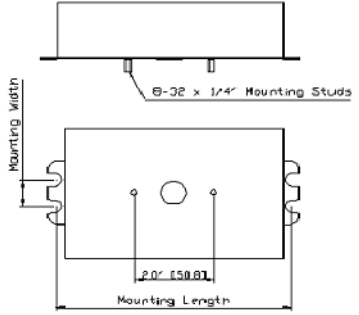
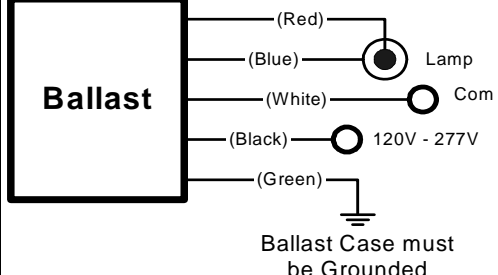
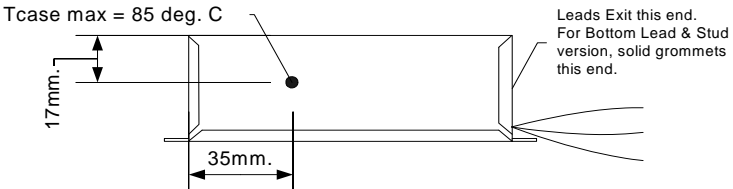



PHILIPS ADVANCE				e-Vision® Electronic Ballast for Metal Halide Lamps			Catalog Number: IMH-70-D For 70W Metal Halide Lamps ANSI M98, M139 or M143 120-277 50/60Hz Electronic Status: RELEASED			
DIMENSIONS AND DATA										
Lamp		Input Volts	Catalog Number*	Line Current (Amps)	Input Power (Watts)	Min Power Factor	Wiring Diag	Fig.	Weight (lb)	Max. Distance to Lamp (ft)
Number	Watts									
70W Watt Lamp, ANSI Code M98, M139 or M143 Minimum Starting Temp -30°C/-20°F										
1	70	120 277	IMH-70-D-XXX	0.67 0.29	80 79	0.9	3	D	1.6	5
 							 <p>Wiring Diagram 3</p>			
Case Figure	Overall Length	Case Length	Case Width	Height	Mountin Length	Mounting Width				
D	128mm [5.0"]	108mm [4.3"]	77mm [3.0"]	38mm [1.5"]	118mm [4.6"]	19mm [0.7"]				
 <p>Case Temperature Measurement Location</p>										
INSTALLATION & APPLICATION NOTES: 1. Maximum allowable case temperature is 85°C. See figure above for measurement location 2. Ignition pulse is 4 kV max 3. All leads are 12 inches long 4. Ballast output will shutdown after 20 minutes if lamp fails to ignite 5. Power must be cycled off – then on, after replacing lamp							*Ordering Information			
							Order Suffix	Description		
							-LF	Ballast with side exit leads and mounting feet		
							-BLS	Ballast with bottom exit leads and mounting studs		
Data is based on tests performed by Philips Advance in a controlled environment and is representative of relative performance. Actual performance can vary depending on operating conditions. Specifications are subject to change without notice. All specifications are nominal unless otherwise noted.										

Philips Lighting Electronics N.A.

10275 West Higgins Road • Rosemont, IL 60018 • www.philips.com/advance

Tel: 800-322-2086 • Fax: 800-423-1882 • Customer Support: 800-372-3331 • OEM Support: 866-915-5886